













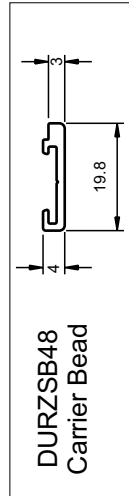
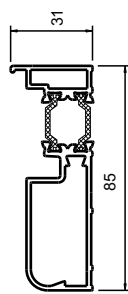
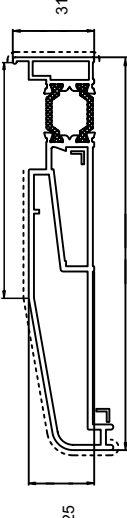
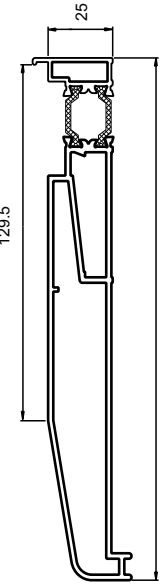


Heritage Ste'alth Secure™ Windows Section Identification

Contents

● <u>Section Identification Overview</u>	<u>Page 2</u>
● <u>Outer Frame & Equal Leg Outer Frame</u>	<u>Page 3</u>
● <u>Ste'alth Secure™ Vent</u>	<u>Page 4</u>
● <u>Transom / Mullion</u>	<u>Page 5</u>
● <u>Beads and Glazing Block</u>	<u>Page 6</u>
● <u>Cills</u>	<u>Page 7</u>
● <u>Drip Bars</u>	<u>Page 8</u>
● <u>Couplers</u>	<u>Page 9</u>
● <u>Head Extension For Trickle Vents</u>	<u>Page 10</u>
● <u>Astragal Bars</u>	<u>Page 11</u>
● <u>Butt Hinges</u>	<u>Page 12</u>
● <u>225 Cill</u>	<u>Page 13</u>
● <u>Fixed Lite Next To An Opener</u>	<u>Page 14</u>


Overview
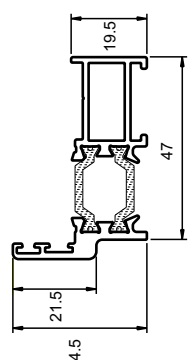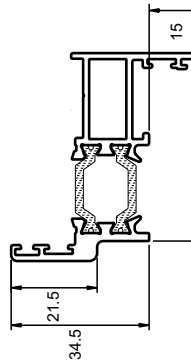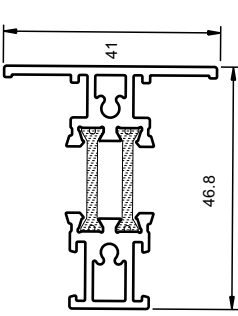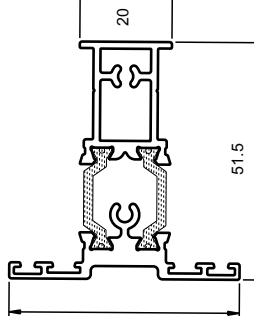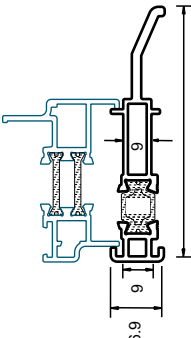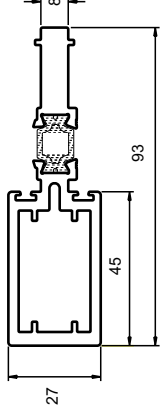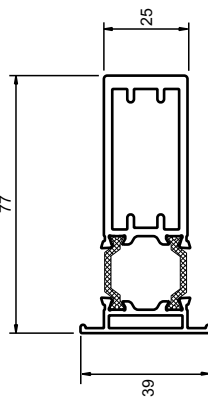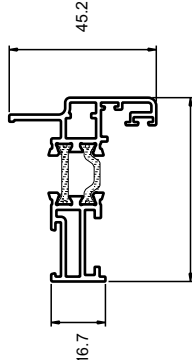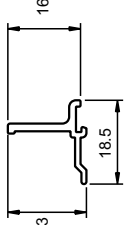
<p>Outer Frame</p> <p>DURW20010 Outer Frame</p>  <p>DURW20013 Odd Leg Outer Frame</p> 	<p>Transom / Mullion</p> <p>DURW20030 Dummy Transom - Screwported</p>  <p>DURW20031 Transom - Screwported</p> 	<p>Drip Bars</p> <p>DURW20481 Drip Bar</p>  <p>DURW20482 Standard Drip Bar</p> 	<p>Couplers</p> <p>DURW20051 Universal Coupler</p>  <p>DURETC517 Universal Coupler</p> 
<p>Vent</p> <p>DURW20023</p> 	<p>Beads and Glazing Block</p> <p>DURW20167 Bead</p>  <p>DURWZSB49 Fixed Lite Bead</p>  <p>DURWZSB46 Fixed Lite Glazing Block</p>  <p>DURZSB48 Carrier Bead</p> 		<p>Cills</p> <p>DURETC178</p>  <p>DURETC157</p>  <p>DURETC158</p> 




Outer Frames

DURW20010
Outer Frame

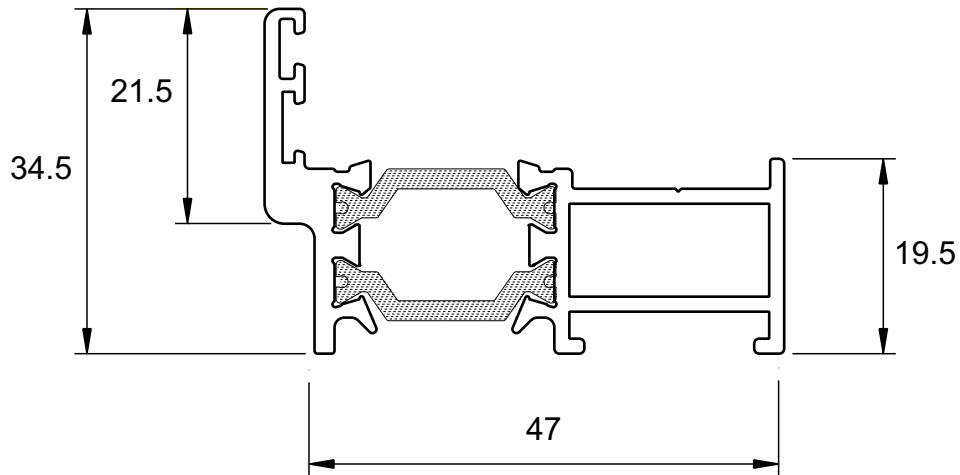


DURW20013
Odd Leg Outer Frame

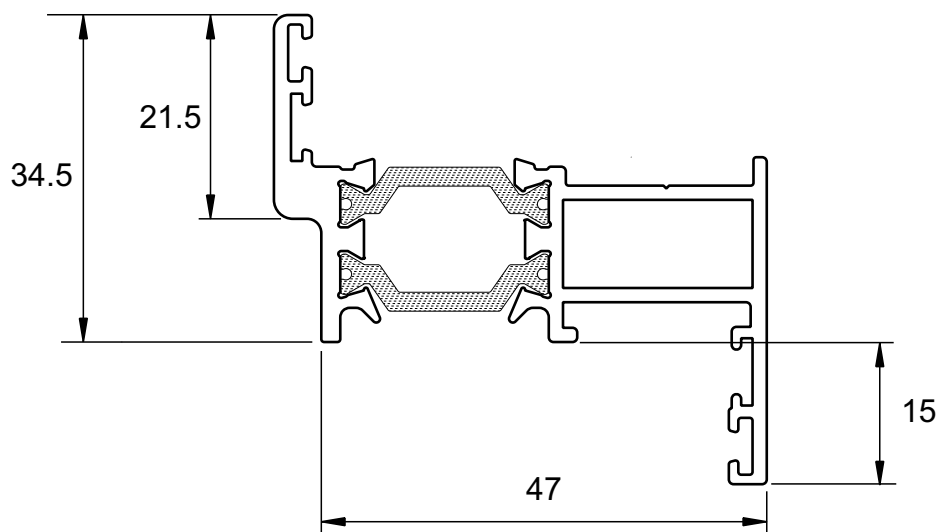



Ste'alth Secure™ Vent


DURW20023
Ste'alth Secure™ Vent

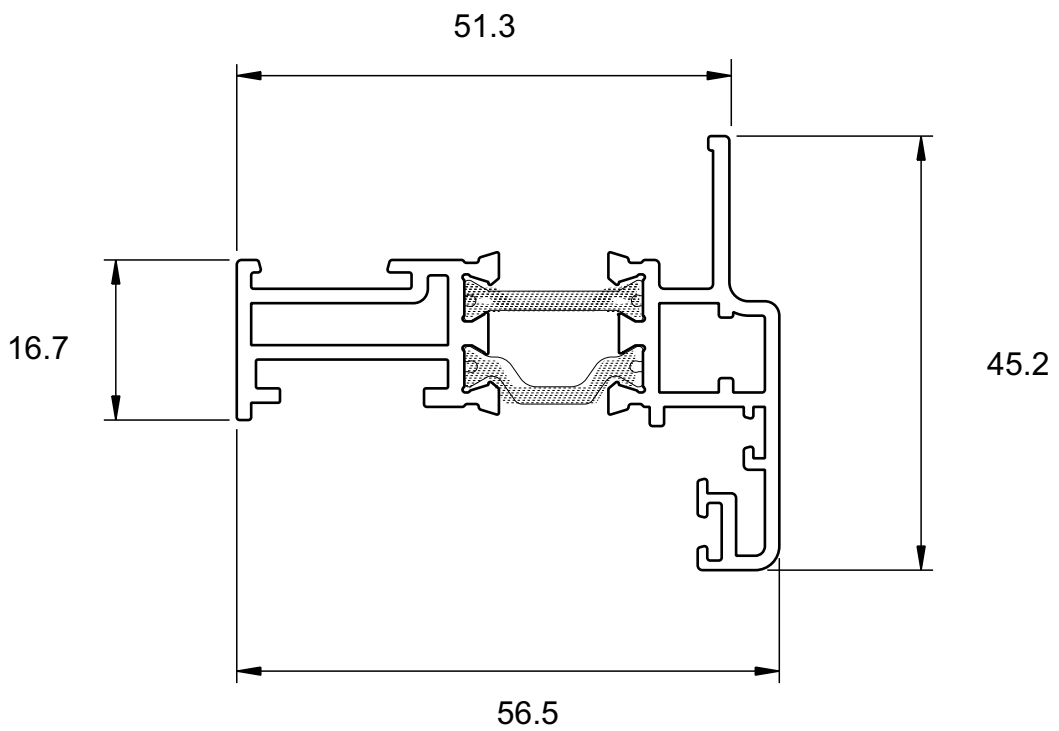




Transom / Mullion

DURW20030
Dummy Transom - Screwported

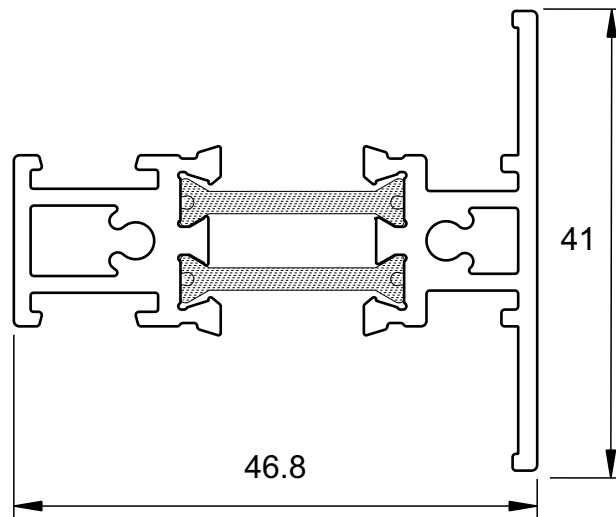


DURW20031
Transom - Screwported

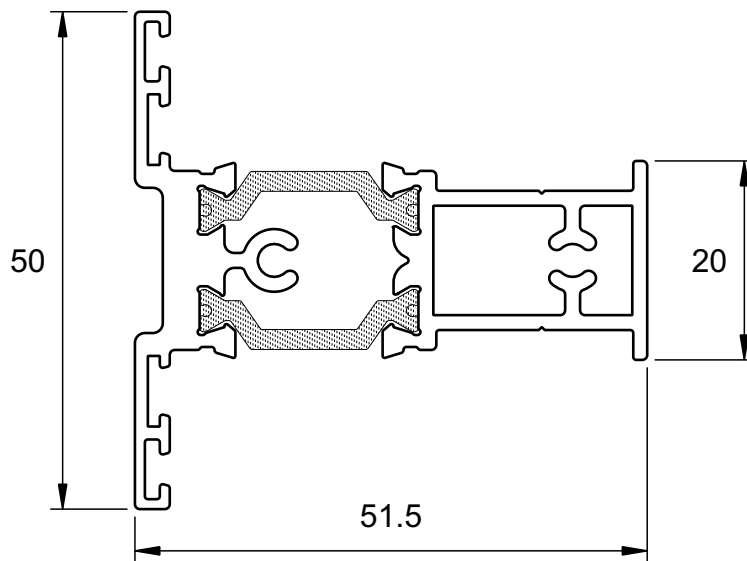




Bead & Glazing Blocks


DURW20167
Bead

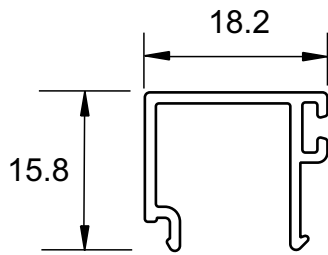


DURZSB49
Fixed Lite Bead

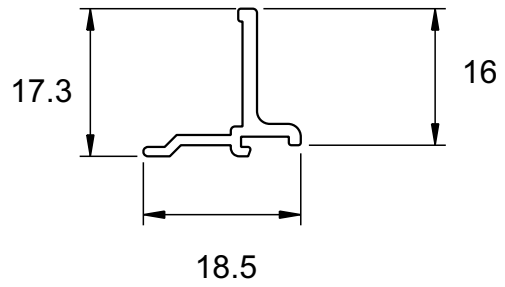

DURZSB46
Fixed Lite Glazing Block

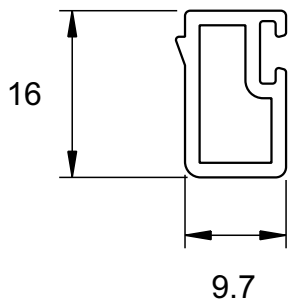


DURZSB48
Bead Carrier

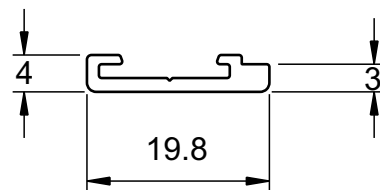




Cills


DURETC178
85mm Cill

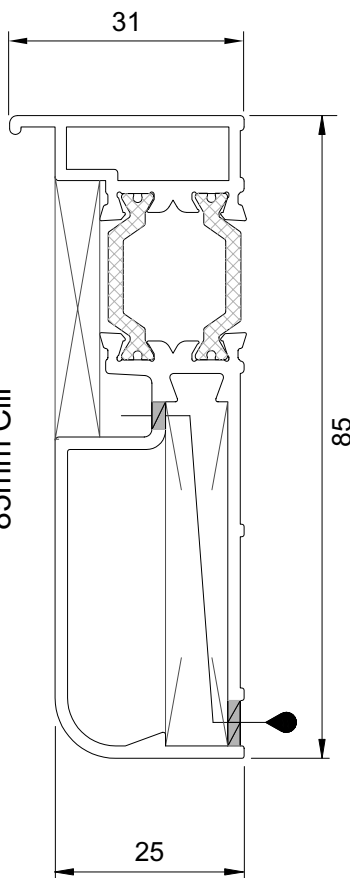

DURETC157
150mm Cill

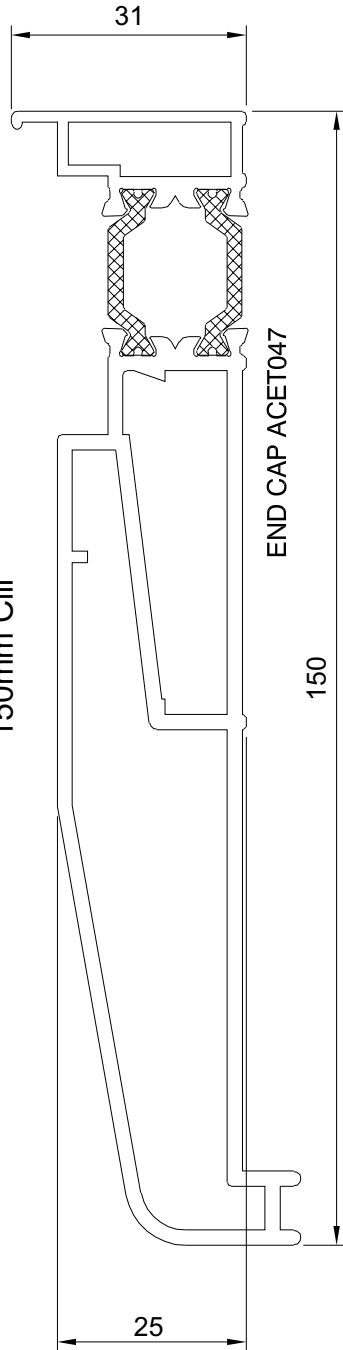


DURETC158
190mm Cill

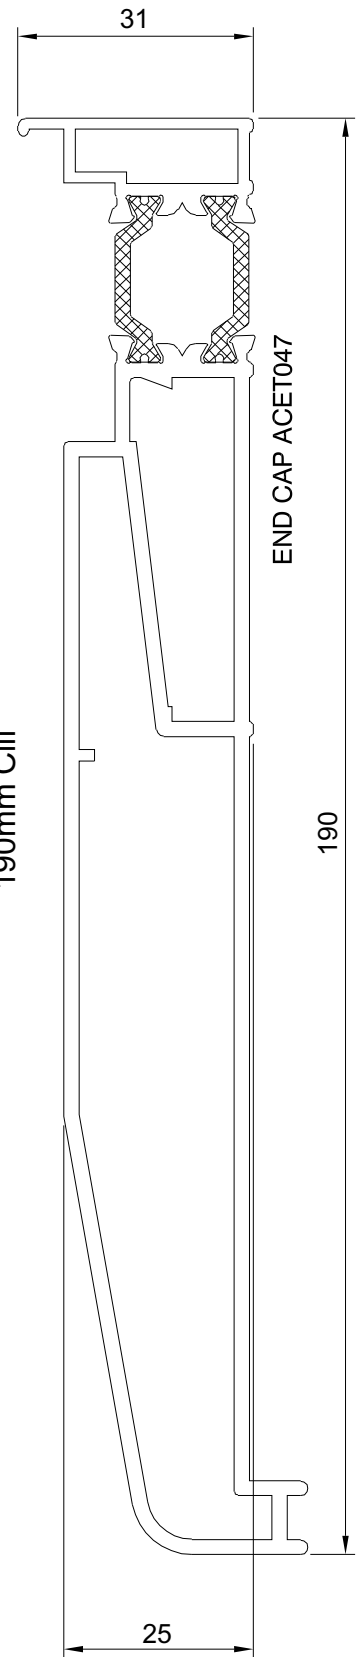




Drip Bars

DURW20481
Drip Bar

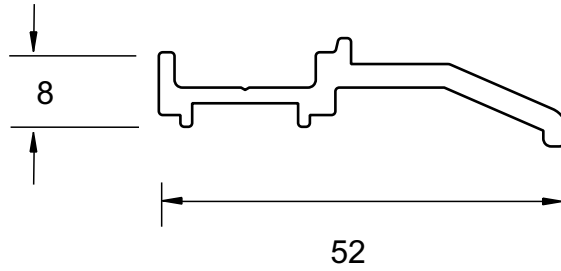


DURW20482
Standard Drip Bar

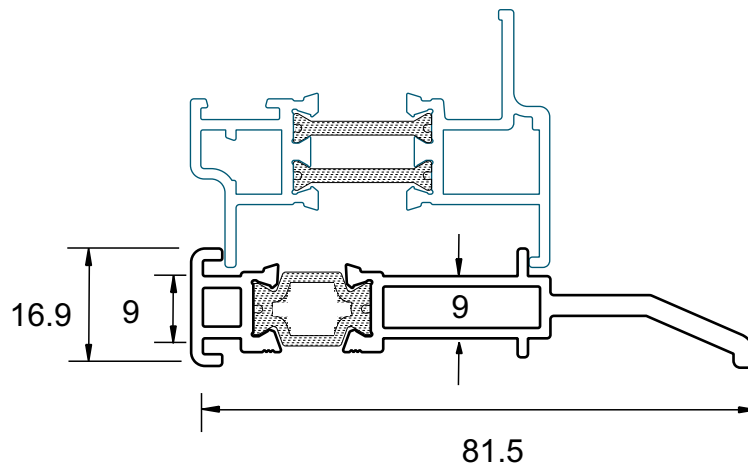




Couplers

DURW20051
Universal Coupler

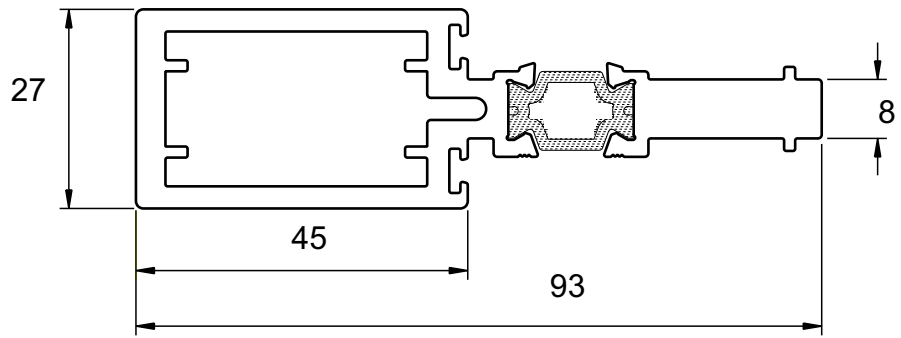


DURETC517
Universal Coupler

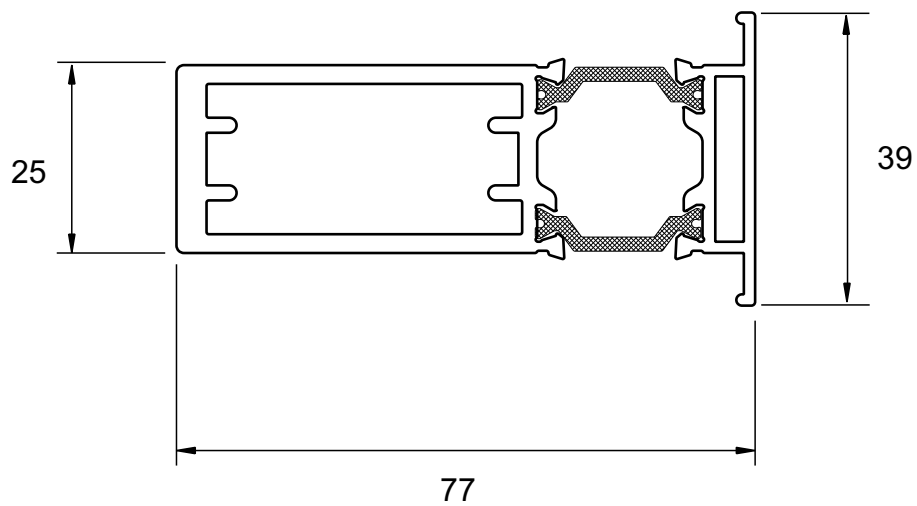



Head Extension For Trickle Vents


DURETC058
Head Extension

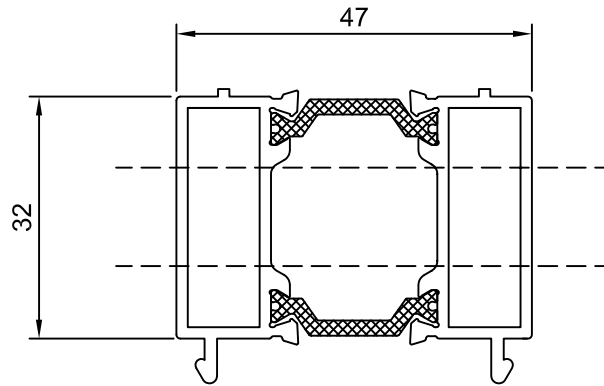




Astragal Bars

DURW10165
25mm Astragal Bars

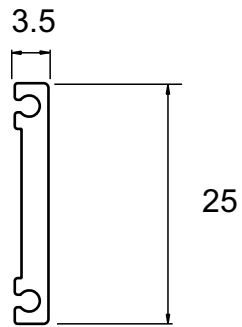


DURW10166
41mm Astragal Bars

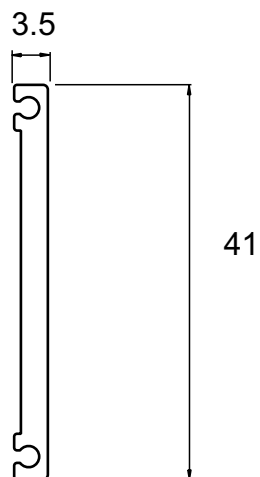




Profile Related Butt Hinges

DURJBC839
Profile Related Butt Hinges

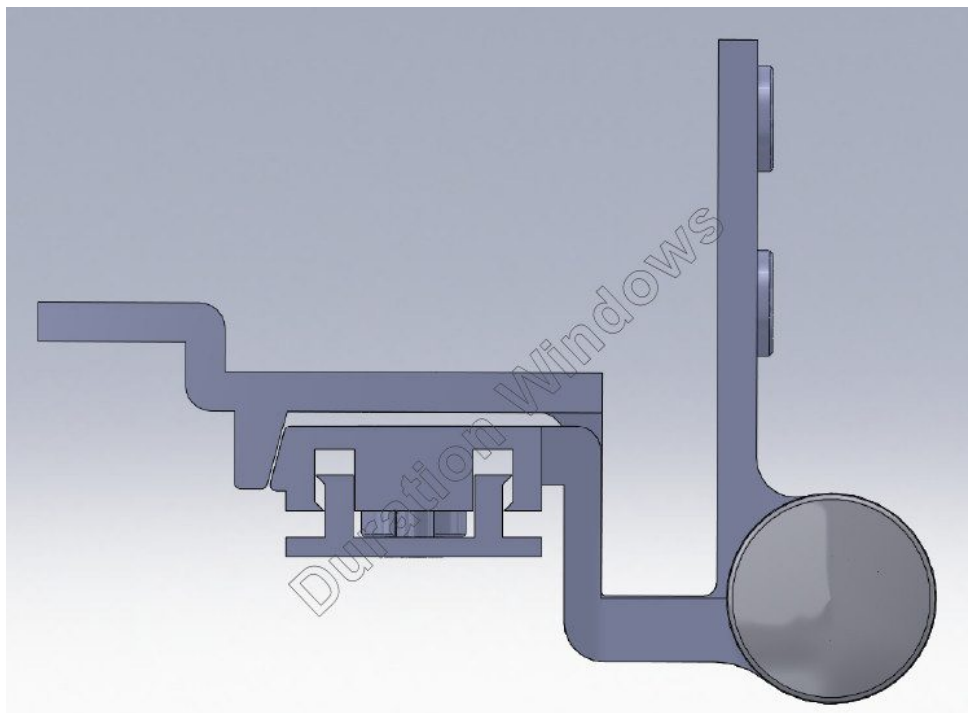

DURJBC802
Dummy Butt Hinges

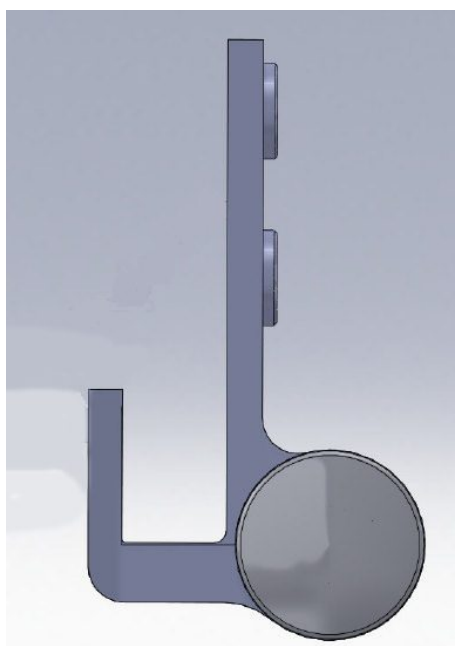


Heritage Ste'alth Secure™ Window
Section Identification



225 Cill

DURETC179
225mm Cill

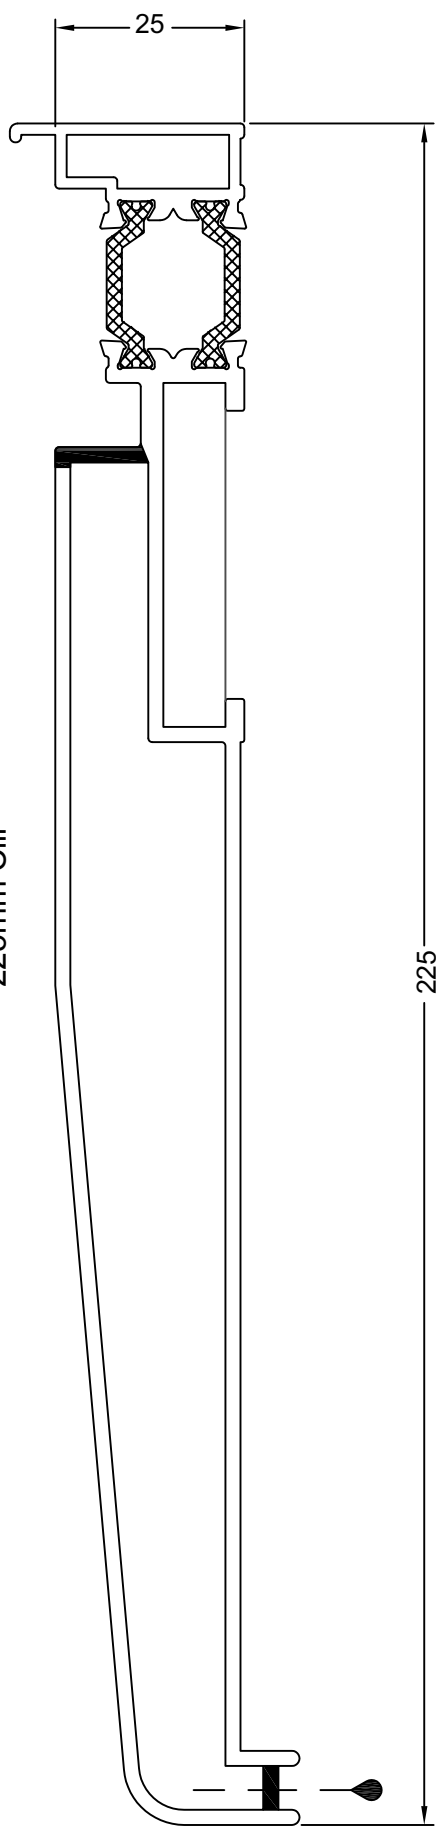



Heritage Ste'alth Secure™ - Fixed Lite Next

Inside

Outside

